

# DAIKIN VRV&SKY SYSTEMS COMPATIBILITY LIST



**Document Version:** 3.0

**Last Updated** : 17.09.2024

**Device Model** : CR-CG-DK-KNX-01

## 1. INTRODUCTION

In this document, compatible Daikin VRV&Sky indoor unit models with Core Daikin VRV Gateway (CR-CG-DK- KNX-01) are specified.



Any AC indoor unit not specified in the list may not be compatible with Core AC Gateway. Therefore compatibility list must be checked before installation.



Any remote controller not specified in the list may not be compatible with Core AC Gateway. Therefore compatibility list must be checked before installation.



We highly recommend to pay attention to the possible updates of this document in case of any misprint, typing error and equivalent problems.



Core Smart Home undertakes maximum effort to avoid any error in the content of this document but cannot be responsible for the consequences that could arise because of any mistake in the document.

**2. COMPATIBLE AC INDOOR UNITS**

LINE	DAIKIN INDOOR UNIT MODEL VRV
<b>2-way blow ceiling mounted cassette</b>	FXCQ- FXYC-
<b>4-way blow ceiling mounted cassette</b>	FXZA- FXZQ- FXYF-
<b>Ceiling mounted corner cassette</b>	FXKQ- FXYK-
<b>4-way blow ceiling suspended unit</b>	FXUQ-
<b>Round flow ceiling mounted cassette</b>	FXFA- FXEQ- FXFQ- FXFSQ-
<b>Ceiling suspended unit</b>	FXHQ- FXYH-
<b>Ceiling mounted build-in</b>	FXTQ-
<b>Slim concealed ceiling unit</b>	FXDA- FXDQ-
<b>Concealed ceiling unit</b>	FHEYB- FXYB- FXYM- FXYS- FXYSP-

<b>Large concealed ceiling unit</b>	FXMQ-
<b>Inverter driven concealed ceiling unit</b>	FXSA- FXSQ-
<b>Floor Standing Unit Without Casing</b>	FXNQ- FXLQ-
<b>Floor Standing Unit With Casing</b>	FXYL- FXYLM-
<b>Wall mounted units</b>	FXAA- FXAQ- FXYA-

3. COMPATIBLE REMOTE CONTROLLERS

WIRED REMOTE CONTROLLERS WORK WITH CORE DAKIN KNX GATEWAY ON THE SAME BUS
BRC1A52
BRC1D52
BRC1E51A
BRC1E52
BRC1E52A
BRC1E52B
BRC1E53A
BRC1E53B
BRC1E53C
BRC1E63
BRC1E73
BRC1H519
BRC1H519W
BRC1H52
BRC1H52W

## 4. INSTALLATION SCENARIOS

### INSTALLATION WITH DAIKIN WIRED REMOTE CONTROLLERS

Connect Core AC Gateway parallel with Daikin wired remote controllers or directly to the P1,P2 connectors of the Daikin indoor unit. In this method, only one controller can be master. Core AC Gateway should be programmed as master, while Daikin wired remote controller programmed as slave or Core AC Gateway should be programmed as slave, while Daikin wired remote controller programmed as master.

### INSTALLATION WITHOUT DAIKIN WIRED REMOTE CONTROLLERS

Connect Core AC Gateway directly to the P1,P2 connectors of the Daikin indoor unit. In this scenario, Core AC Gateway should be programmed as Master.